



Hand Mixer with Stand Model CE070BS

PLACE PICTURE HERE

INSTRUCTION MANUAL

SAVE THESE INSTRUCTIONS

Dear Valued Customer

Thank you for purchasing a *CASCADÉ* appliance.

We understand the importance of your purchasing decision, and appreciate your final choice to introduce this *CASCADÉ* product into your home.

Your *CASCADÉ* appliance is recognised as a quality product at an affordable price, and is proudly supported by our after sales service team. We encourage you and your friends to choose from the range of *CASCADÉ* appliances available exclusively to The Warehouse.

TECHNICAL INFORMATION

Please make sure that your house installation voltage corresponds to the voltage marked on the unit.

Mains supply:	230V ~ 50 Hz – AC only
Rated Power:	200 Watts

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Carefully read these instructions before using your appliance.
2. **CAUTION** keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.
3. **VERY IMPORTANT** do not immerse mixer body in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.
4. Unplug from mains outlet when appliance is not in use, before attaching or removing accessories, and before cleaning.
5. An appliance that has been dropped or damaged should not be used until examined by a service engineer.
6. Do not permit the mains lead to come in contact with hot objects. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
7. Use this appliance only for its intended use. Use only genuine attachments supplied by an authorised Service-Dealer.
8. The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
9. Do not let the cord hang over edge of table or counter.
10. **WARNING** an appliance should never be left unattended when plugged in.

11. This appliance is intended for household use only and not for commercial or industrial use.
12. If appliance is to be used by a third party, please supply the instruction manual with it.
13. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

CAUTION

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

BEFORE FIRST USE

1. Your CASCADE Mixer and Bowl has left the factory in a sealed carton for your protection. Should the carton be damaged or if the product is dropped, damaged, has a malfunction in any way, or if the flexible cord is damaged, immediately contact your retailer for replacement or repair.
2. Carefully unpack your CASCADE Mixer and Bowl. Make sure you do not discard any packaging material until all parts of the mixer have been found.
3. Carefully wipe the exterior of the mixer with a damp cloth to remove any dust that may have accumulated. Dry with a dry towel. Do not use abrasive cleaners.
WARNING do not immerse mixer in water or any other liquids.
4. Wash the accessories, bowl and mixing beaters, in hot soapy water. Dry with a dry towel.
5. The appliance is now ready for operation.

OPERATION

- Before using the appliance for the first time, or after long periods of storage, clean the appliance thoroughly. (See BEFORE FIRST USE.)
- Always place the mixing stand on a flat, clean and non-slippery surface before operating it.
- Place the bowl onto the stand base.
- Insert selected beaters into mixer, making sure that the right hand beater has drive gear attached (for automatic bowl rotation).
- Insert mixer into stand, carefully locking drive wheels together (for automatic rotation)
- Plug the power cord into a suitable mains outlet corresponding to the supply requirements of your mixer.
Mains supply: 230V~50Hz – AC only
- Place ingredients to be mixed into bowl
- Select desired speed level on mixer switch. Mixer will commence mixing.
- For Turbo boost, press turbo button while in operation.
- **WARNING** do not touch moving beaters.
- For hand mixing without the use of stand or bowl, simply remove mixer from stand.
- To eject beaters from mixer press Eject button.
WARNING do not eject while mixer is in operation.

WARNING do not operate the mixer for more than 2 minutes continuously. If used for more than 2 minutes continuously, allow to cool for 1 minute.

CLEANING AND CARING FOR YOUR MIXER

- Always disconnect your CASCADE mixer from the mains supply before cleaning.
- Never immerse your mixer in water or other liquids.
- Wipe the exterior of the mixer with a damp cloth. Dry with a dry towel.
- Wash the bowl and accessories in hot soapy water. Dry with a dry towel.
- Store your CASCADE mixer in its original box or store in a dry cupboard.

Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase with proof of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts or refund when the product is returned freight prepaid to the retailer with proof of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: _____

Model No.: _____ Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer. If service or a warranty claim is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged or warranty declined. For technical help contact the helpline.

Technical Assistance Helpline

New Zealand call Toll Free 0800-898580

Australia call Toll Free 1-800-858011

Email service@orientalpacific.com